



* Note: If the brace has been adjusted for size, you may have to re-adjust it for some of the decals to fit in their proper position. Primarily decal shapes 8 and 9.


When you start your installation (on top of foam) Make sure material has been thoroughly cleaned (as all parts should be) completely dry . Also, using a SMALL amount of heat from blow dryer or heat gun will allow the decal to conform and stick better to the foam material. Once the decal has set(typically 48 hours) there is a chance the decal could tear the material if the decal is removed. If you wish to remove the decal for any reason after it has "set", using a SMALL amount heat will help remove the decal without grabbing the material and tearing it. It is , after all, super aggressive DeCal Works adhesive. The Original, and the best for over 18 years and counting...





"FRONT HALF" OF BRACE

"BACK HALF" OF BRACE

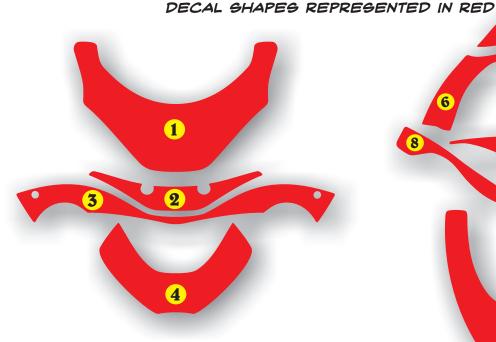



2021 Johnson ct. Kingston, IL. 60145 WWW.decalmx.com 815-784-4000

